

An American Vanguard Company

# All Clear DS




# Removes damaging residues from your boom sprayer

Contamination of boom sprayers and ineffective cleaning may lead to:

- Crop damage and yield loss
- Tank residues and breaches of MRLs
- · Equipment corrosion
- · Blocked filters and lines.

All Clear® DS provides unmatched cleaning and decontamination when used according to the product label.

## All Clear DS has 3-way action

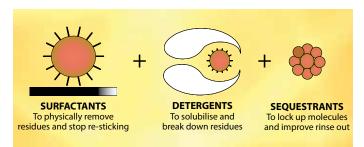

#### Tank decontamination is critical

Australian farmers grow a variety of crops but often only use one spray rig. If sprayer decontamination is not carried out, there may be a high chance of crop damage affecting yield potential. Crop protection chemicals can bind to the inside of spray tanks, hoses, nozzles and filters. In many cases, flushing with water will not remove these residues. However, they may be mobilised by subsequent spray operations, risking crop damage.

Until the launch of All Clear DS, farmers and spray operators needed to use many different decontamination products, depending on the situation. Now with All Clear DS, confusion and costly mistakes can be avoided. The examples adjacent demonstrate the wide range of products removed by All Clear DS.

# All Clear DS makes the choice so simple

Recommendations for cleaning spray equipment vary by product. These recommendations include the use of chlorine bleach (e.g. Glean†), ammonia (e.g. Valor†) and laundry detergent (e.g. Hammer†).

All Clear DS makes the choice of tank cleaner simple. Not only will All Clear DS perform as well as the cleaning agent recommended on the labels of the products in the list adjacent, but laboratory data shows that All Clear DS will often do a better job. So you only need one tank cleaner for a range of products – All Clear DS.

Examples of products* removed by All Clear DS		
Achieve <sup>†</sup>	Garlon <sup>†</sup>	Sharpen <sup>†</sup>
Affinity <sup>†</sup>	Gaucho <sup>†</sup>	Simazine 900 DF
Ally <sup>†</sup>	Glean <sup>†</sup>	Sinbar <sup>†</sup> 800 WP
Amicide <sup>†</sup>	Glyphosate	Spinnaker <sup>†</sup>
Amistar <sup>†</sup> Xtra	Gramoxone <sup>†</sup>	Spray.Seed <sup>†</sup>
Atlantis† OD	Hammer <sup>†</sup>	Starane <sup>†</sup>
Atrazine	Hellcat®	Starkle <sup>†</sup>
Axial <sup>†</sup> 100 EC	Hussar <sup>†</sup> OD	Stinger <sup>†</sup>
Balance <sup>†</sup>	Intervix <sup>†</sup>	Talinor <sup>†</sup>
Baron® 400 WG	Intruder <sup>†</sup>	Terbyne <sup>†</sup> Xtreme <sup>†</sup>
Bladex® 900 WG	Katana <sup>†</sup>	Terrad'or <sup>†</sup>
Boxer Gold <sup>†</sup>	Kerb <sup>†</sup>	Terrain <sup>†</sup>
Broadstrike <sup>†</sup>	Lightning <sup>†</sup>	Thistrol <sup>†</sup> Gold
Brodal <sup>†</sup> Options	Linuron 480 SC	Tigrex <sup>†</sup>
Butisan <sup>†</sup>	Linuron 500 DF	Tilt <sup>†</sup>
Callisto <sup>†</sup>	Logran <sup>†</sup> B-Power	Tordon <sup>†</sup> 75-D
Clethodim 360	Lontrel <sup>†</sup>	Tough <sup>†</sup>
Colex-D <sup>†</sup>	Lusta <sup>†</sup>	Triathlon <sup>†</sup>
Decision <sup>†</sup>	Luximax <sup>†</sup>	Tribunil® 700 WP
Diurex <sup>†</sup> WG	Migiwa <sup>†</sup> Kinoprol <sup>†</sup> Active	Trifluralin
Dropp <sup>†</sup>	Paradigm <sup>†</sup>	Unyunox® 250 EC
Dropp <sup>†</sup> Ultramax <sup>†</sup>	Pixxaro† Arylex† Active	Uragan⁺ WG
Dropzone <sup>†</sup>	Precept <sup>†</sup>	Valor <sup>†</sup>
Dual Gold <sup>†</sup>	Prosaro <sup>†</sup>	Verdict <sup>†</sup>
Eclipse <sup>†</sup>	Quadrant <sup>†</sup>	Voraxor <sup>†</sup>
Estercide <sup>†</sup>	Reflex <sup>†</sup>	XtendiMax <sup>†</sup>
Factor <sup>†</sup>	Rexade <sup>†</sup> Arylex <sup>†</sup> Active	Zampro <sup>†</sup>
Folicur <sup>†</sup>	Sakura <sup>†</sup>	Zoliar <sup>†</sup> 800 DF
ForageMax <sup>†</sup>	Sencor <sup>†</sup>	
Trace element precipitates		
XAL		

\*Always read the label of the products to be cleaned.





An American Vanguard Company

# All Clear DS

## All Clear DS is easy to use

- 1. After spraying, immediately drain spray tank and hoses.
- 2. Follow product label precautions for operator protection.
- 3. Wash outside of tank with All Clear DS at the rate of 250 mL per 100 L water.
- 4. Wash visible residues inside tank with clean water and flush system with clean water. Use a volume of at least 10% of tank capacity.
- 5. Rinse or pressure clean the inside of all equipment with at least 1/10 of tank capacity of clean water. Visible residues should be removed from tank, then boom, lines and nozzles flushed. Drain all equipment completely.

**Note:** the entire spraying and chemical transfer system ("entire system") includes but is not limited to venturi style hoppers, pre-mix tanks, transfer systems, suction hoses, filters, tanks, tank lids, flush tanks, strainer baskets, valves, diaphragms, booms, spray lines and nozzles. These should be cleaned with All Clear DS.

Following the completion of steps 1 to 5, proceed with either 6A or 6B:

Tank volume	Amount of All Clear DS to be used
500 L	1.25 L
1000 L	2.5 L
2000 L	5 L
3000 L	7.5 L
4000 L	10 L
6000 L	15 L
8000 L	20 L

#### **6A. TANKS WITH NO INTERNAL SPRINKLERS**

- Half fill the tank with clean water and add All Clear DS at the rate of 250 mL per 100 L of tank capacity. For example, for a 1000 L tank, add 500 L of water and 2.5 L of All Clear DS.
- ii. Start the pump with full agitation and mix well. Flush the All Clear DS solution through the entire system, ensuring that boom end valves are open and/or bungs removed for a complete boom treatment.
- iii. Close boom end valves and/or replace bungs once All Clear DS solution is freely flowing from the ends of the booms. Top up the tank until filled with clean water and allow to stand for 15 minutes with the agitation running. Flush all of the solution out of the spray tank via the spray boom lines and nozzles.
- iv. Nozzles, screens, filters and non-drip diaphragms should be removed and washed separately with All Clear DS solution at the rate of 25 mL in 10 L of water.
- v. Drain tank and flush the entire system with clean water.
- vi. A susceptible plant should be treated with a sample of the final rinsate to determine whether residues remain.

#### See NOTE.

# **6B. TANKS WITH INTERNAL SPRINKLER SYSTEMS**

It is recommended that at least 2000 L of water is used as a minimum flush volume with 5 L of All Clear DS.

- i. Calculate the amount of water required to flush the entire spraying system for 30 mins through the nozzles under normal operating pressure (the flush volume).
  - (Example: 2000 L takes 34 minutes to spray out.)
- ii. Add half of the flush volume of water to the tank. Add All Clear DS at the rate of 250 mL per 100 L of the total flush volume. (Example: for a flush volume of 2000 L, add 1000 L of water and 5 L of All Clear DS to the tank.)
- iii. Start the pump with full agitation and mix well. Flush the All Clear DS solution through the entire system, ensuring that boom end valves are open and/or bungs removed for a complete boom treatment.
- iv. Close boom end valves and/or replace bungs once All Clear DS solution is freely flowing from the ends of the booms. Add the other half of the flush volume of water to the tank. Run the agitation and internal sprinklers or tank washing nozzles for 30 minutes.
  - Flush all of the solution out of the spray tank via the spray boom lines and nozzles.
- v. Nozzles, screens, filters and non-drip diaphragms should be removed and washed separately with All Clear DS solution at the rate of 25 mL in 10 L of water.
- vi. Drain tank and flush the entire system with clean water.
- vii. A susceptible plant should be treated with a sample of the final rinsate to determine whether residues remain.

#### See NOTE.

#### NOTE:

If the tank cleaning history is unknown or may have been compromised, or extra "sticky" product combinations have been used (e.g. carfentrazone-ethyl/glyphosate, Valor†/glyphosate, etc.), longer soaking is required with All Clear DS solution at the label rate to increase product residue removal. After standing for at least 15 minutes with the boom closed and agitation# running, all internal surfaces of the spray system including lines, filters, nozzles, etc. should then remain in contact with All Clear DS solution for at least 24 hours but no longer than 48 hours. Agitation# should be resumed for at least another 15 minutes before the system is flushed completely. #including internal sprinklers/tank cleaning nozzles where relevant.

All hoses should be inspected annually for both external and internal damage and cracking. The internal surfaces of old or perished hoses will hold significant levels of pesticide residues, so these hoses should be replaced immediately.

# **User safety**

All Clear DS offers a high degree of user safety when stored, transported and used according to the label.

Information and data referred to herein were generated using products and rates that were registered at the time, may include extracts from the product label and does not constitute the complete directions for use. Always read and follow product labels.

AgNova Technologies Pty Ltd shall not be liable for any consequential or other loss or damage relating to the supply or subsequent handling or use of this product, unless such liability by law cannot be lawfully excluded or limited. All warranties, conditions or rights implied by statute or other law which may be lawfully excluded are so excluded. Where the liability of AgNova Technologies Pty Ltd for breach of any such statutory warranties and conditions cannot be lawfully excluded but may be limited to it re-supplying the product or an equivalent product or the cost of a product or an equivalent product, then the liability of AgNova Technologies Pty Ltd for any breach of such statutory warranty or condition is so limited.

© Copyright AgNova Technologies 2025. \*Registered trademarks of AgNova Technologies Pty Ltd. \*Registered trademark\* or trademark. ALCAGN250610

For more information scan the OR code or contact your local **Area Sales Manager** 



